

# **MEDIA CABINET**

AVR - ASD

M8 Screws

(6)

### INSTALLATION INSTRUCTIONS


There are 3 models of cabinet only; AVR5, AVR7, AVR9.

There are 3 models of cabinet with mast; ASD5, ASD7, ASD9.

All series 5 and 7 have flat sides. All Series 9 have oval sides.

All have rack mounting and there are two sizes of optional shelf.

PARTS LIST		PARTS LIST	
ITEM NO.	DESCRIPTION	8	SCREEN MOUNT
1	1500MM COLUMN	9	SIDE PANEL
2	BASE	10	TOP PANEL
3	COLUMN ADAPTOR	11	REAR PANEL
4	COLUMN BLANK PLATE	12	CASTOR
5	COLUMN STOPPERS	13	500mm(W) x 700mm(D) OPTIONAL SHELF
6	DOOR	14	500mm(W) x 500mm(D) OPTIONAL SHELF
7	MAST INSERT SET	15	OVAL SIDE PANEL PLUS OUTER

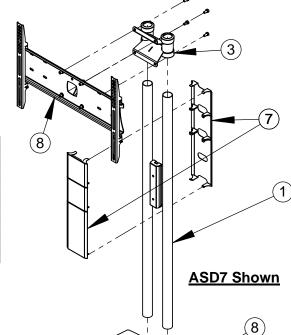

(15)

(11)

(13)

5

2

## **Examples:**

AVR5 500(W) X 700(H) X 500(D)























Inspect the unit before installing

Warning: Watch for pinch points. Do not put your fingers between moveable parts. Do not tamper with or dis-assemble any spring loaded items.

1. Carefully inspect the unit for shipping damage. If any damages apparent, call your carrier claims agent and do not continue with the installation until the carrier has reviewed the damage.

2. Lay out components to ensure you have all the required parts before proceeding (see parts list).




Pay attention to the maximum weight that this unit will support. 60kg.

We recommend installation by a qualified tradesperson. If you have any questions about the installation, contact Unicol, (uk +44 (0) 1865 767676) (europe +49 (0) 9131 9405 8013).



# MEDIA CABINET

AVR - ASD

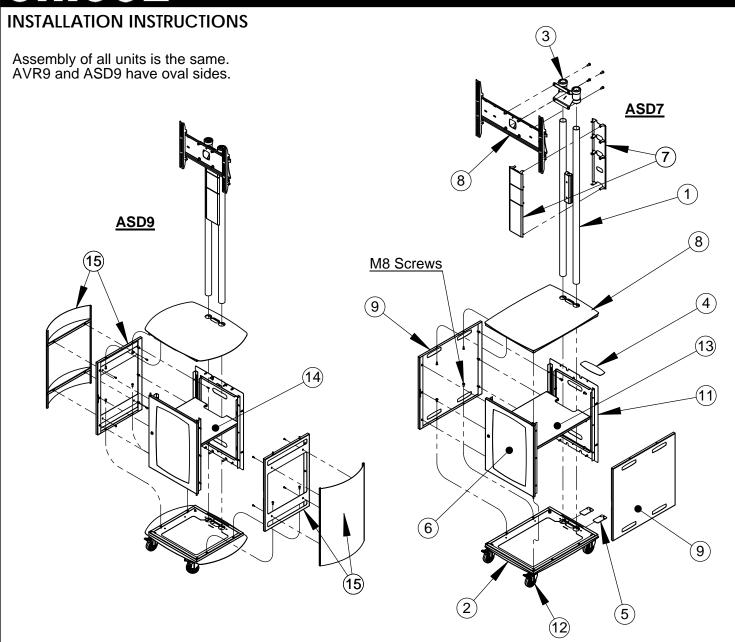

### Assembly:

Identify Base 2. If you have the AVR5, 7 or 9 do not fit Column Stoppers 5. For ASD5, 7 or 9 using columns, locate the 2 Column Stoppers 5 in the receptacles in the base to prevent the columns hitting the floor.

- 1. and 2. Fix the side panels (9) to the base using the M8 screws provided.
- 3. and 4. Locate the rod on the door 6 in the hole in the corner of the base 2 and Top 8. Fix the Top to the Side Panels using the M8 screws provided.
- **5**. Fix the Rear Panel (11) to the Base, Side Panels and Top using the M8 screws provided.
- **6**. If columns are being used place the columns 1 through the Top and locate them into the holes in the Base, (resting on the column stoppers).
- 7. Place column adaptor (3) down the columns at the desired height and tighten grub screws.
- 8. See separate Instructions to fit Screen.
- **9**. Cable up unit then press in mast inserts (7) between columns (cut-outs to rear).